



GoPro Hero 2 Menu Tree

(compiled by Conrad H. Blickenstorfer)

The GoPro Hero2 has a much improved LCD menu interface. Instead of cryptic codes, choices now use icons and text. The top row shows the Hero2's primary modes: video, photo, burst, time lapse, and self-timer. Selecting the wrench icon brings up the settings menu.



The small LCD screen on the front of the Hero2 displays a lot of information: Mode, FOV angle, video or photo resolution, files on card, how many shots or how many minutes of video left on card, and battery status.

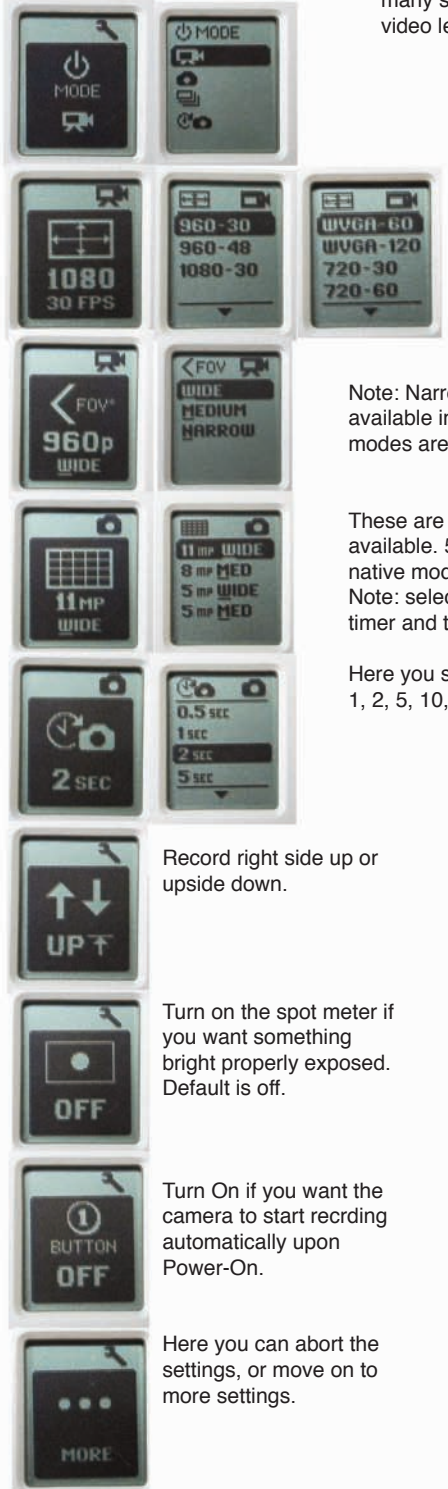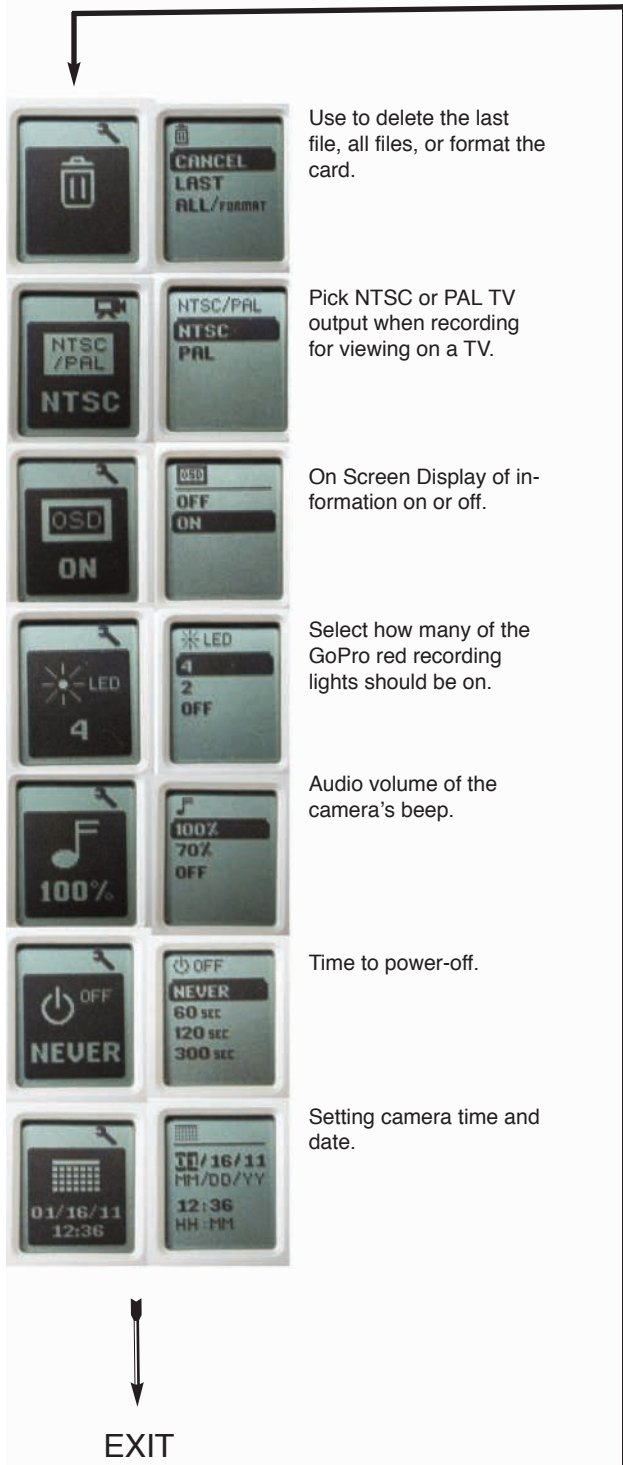

Hero2 available video modes:

	narr.	med.	wide
1080p/30fps	yes*	yes	yes
960p/48fps*	--	--	yes
960p/30fps	--	--	yes
720p/60fps	--	--	yes
720p/30fps	--	--	yes
WVGA/120fps*	--	--	yes
WVGA/60fps	--	--	yes

* = new for Hero2

Note: Narrow/Medium/Wide is ONLY available in 1080 mode. All other modes are wide-only.

These are the four still modes available. 5mp wide seems to be the native mode with the cleanest picture. Note: selection applies to burst, self-timer and time lapse as well.

Here you set Time Lapse mode: 0.5, 1, 2, 5, 10, 30, 60 seconds.

Shutter/Select
Power/Mode → EXIT